

## **Exterior Bump Casters**

Exterior Bump Casters, when mounted to one of our low profile carts, allow the cart to effortlessly cross obstacles inluding ramps, curbs, uneven surfaces and more. The Exterior Bump Casters even help with stairs! Compatible with the yel\_Low Safety Dolly, MoversMax, and standard on the Move PRO.

## **Contents:**

Qty 4 4" wheelsQty 4 3/8" NutsQty 8 5/16" WashersQty 4 Yellow Caster BracketsQty 8 3/8" washersQty 8 5/16" LocknutQty 4 3/8" x 2.5" Hex BoltsQty 8 5/16" x 3/4" Carriage Bolt

## Installation:

- 1. Determine which side you would like to install the exterior casters. Casters can be installed at the front and rear or the left and right side of the cart body.
- 2. Insert two 3/4" carriage bolts into the back of the caster bracket and through the mounting location in the cart body. On the inside of the cart body, add a washer and locknut to the carriage bolt. Tighten locknut. Repeat process for the other three caster brackets.
- 3. To attach the wheel to the caster bracket, slide one 3/8" washer onto a 2.5" hex bolt, insert hex bolt into the side mouniting hole of the caster bracket, through the 4" wheel and out the other side of the caster bracket. Add 3/8" washer and nut to the bolt. Tighten. Do not overtighten or wheel will not spin. Repeat process to install the other three wheels.
- 4. Once installed, the exterior casters will be slightly rasied off the ground. The casters are designed to come in contact with uneven terrain such as ramps and curbs.

