




## SETTING UP THE SAW TRAX PANEL SAW KIT

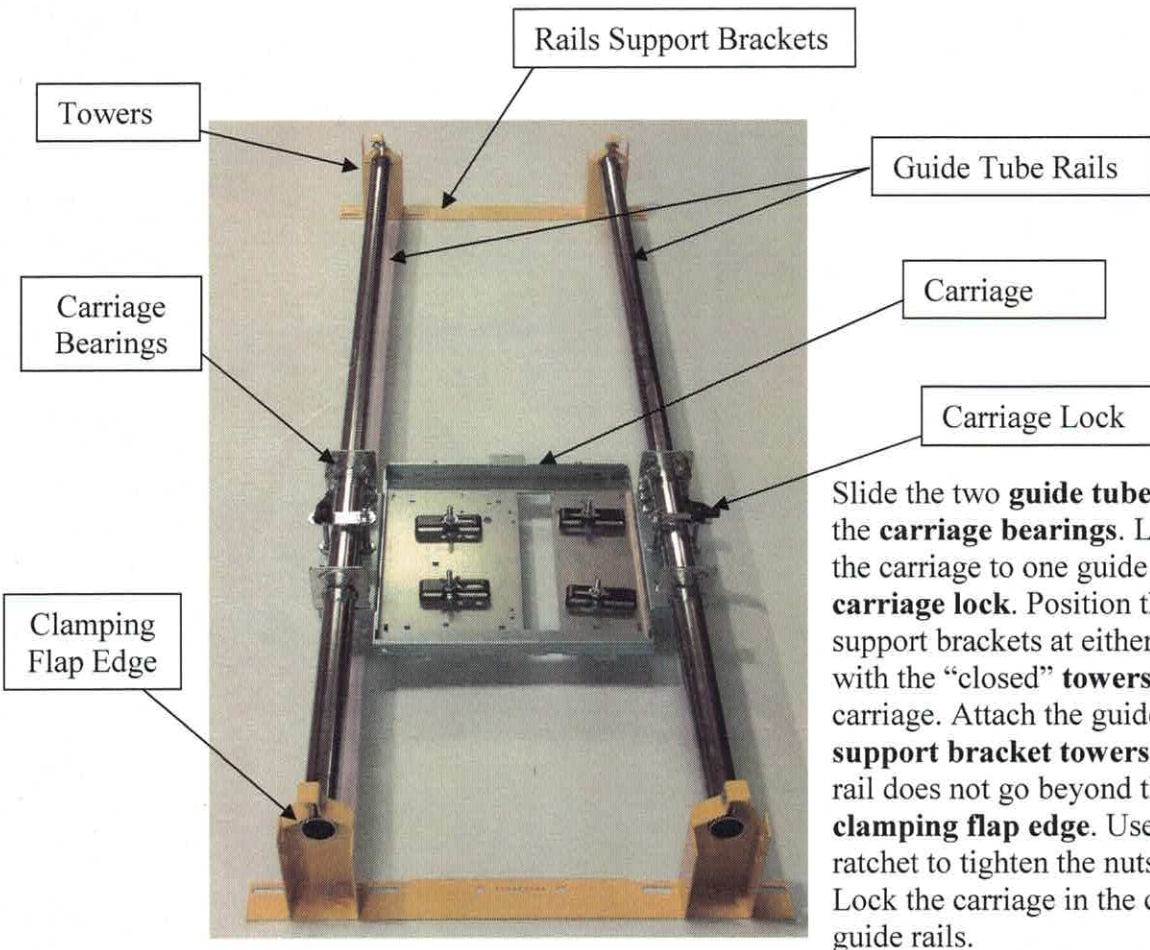

Slide the two **guide tube rails** through the **carriage bearings**. Lock one side of the carriage to one guide rail using the **carriage lock**. Position the guide rail support brackets at either end so the side with the “closed” **towers** is facing the carriage. Attach the guide rails to the rail **support bracket towers** so the guide rail does not go beyond the top **clamping flap edge**. Use a socket / ratchet to tighten the nuts on the towers. Lock the carriage in the center of both guide rails.

